




SERVICE CABLE IS NOT ALLOWED ABOVE OR BELOW A BUILDING.

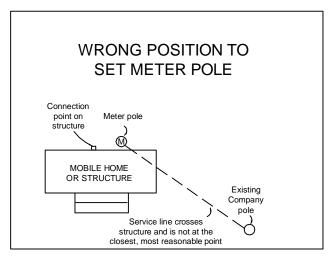

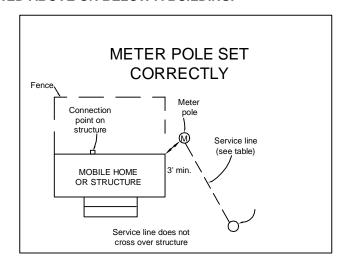

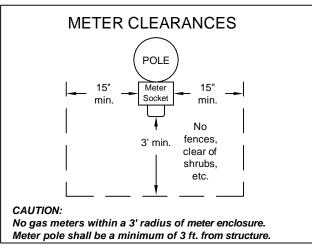

Maximum Recommended Distance (NOTE 3)				
Amps	Length			
100	100'			
200	75'			
320	40'			

CALL 811 TWO BUSINESS DAYS BEFORE YOU DIG

In locations with underground facilities, the Customer shall notify One Call and shall have One Call locate all underground facilities before digging. It shall be the responsibility of the Customer to stay clear of all underground facilities.

ENTERGY SERVICES, INC.

PERMANENT POLE - OVERHEAD SERVICE

DETAILS FOR SINGLE MOBILE HOME


Notes:

- 1. Customer facilities shall comply with Company Standards, the NEC, and authorities having jurisdiction.
- 2. The customer is responsible for clearing and maintaining all right of way.
- 3. The Company service cable shall not go over the top of the mobile home or if there is not a clear path to the meter pole or the maximum distance is exceeded, an additional pole may be required. Contact Company in advance to learn additional Customer cost. Additional Customer cost is typically \$1500 or more.

INSTA	LLATION (OR STRU	JCTURE
APPROVED BY:	JRH	DATE:	10/30/2012
CHECKED BY:	JED	SCALE:	None
DRAWN BY:	krich95		

					·
3					
2					Г
1	10/12	REVISION OF DRAWING SS4.6-2	JED		İ
NO.	DATE:	REVISION	BY:	APPR:	ĺ

KAWNBY: N	1101133						
	No		D4-4				
Entergy	PLOT	1=1	SH.	1	OF	1	

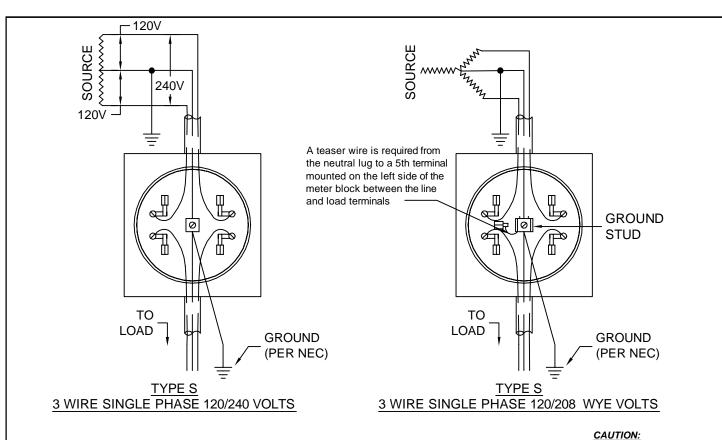


SOURCE

LINE

SIDE

LOAD

SIDE

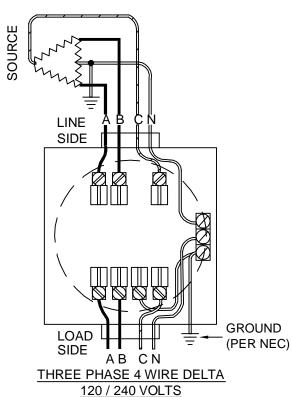

For 480 volt service, see drawing D9-4.

For 277/480 volt service, Customer shall furnish and install a Company approved, Company lockable, non fused disconnect switch on the supply side of the meter base and a separate load side disconnect with overcurrent protection within 2 ft. of the meter.

Company shall control the supply side disconnect. It shall be labeled "Utility Disconnect" see §1.5 Labels and Disconnects and it shall be available to Company 24 hours a day without notice.

GROUND (PER NEC)

AB CN THREE PHASE 4 WIRE WYE 120 / 208 or 277/480 VOLTS

- 1. Ungrounded Conductor with the Higher Voltage to Ground (Phase marked C) must be marked orange.
- 2. All sockets, except residential single phase less than 320 Amps, shall have a manual mechanical gang operated bypass switch.
- 3. Load and supply wires shall not cross in the meter socket.

ENTERGY SERVICES, INC.


WIRING DIAGRAM CONNECTIONS FOR OVERHEAD **SELF CONTAINED METERS**

JRH APPROVED BY: DATE: 01/14/2013 CHECKED BY: JED SCALE: NONE DRAWN BY: krich95

Entergy

No. D9-2 **PLOT** 1=1 SH. 1 OF

1	01/13	REVISION OF DRAWING SS11.8-1		
NO.	DATE:	REVISION	BY:	APPR:

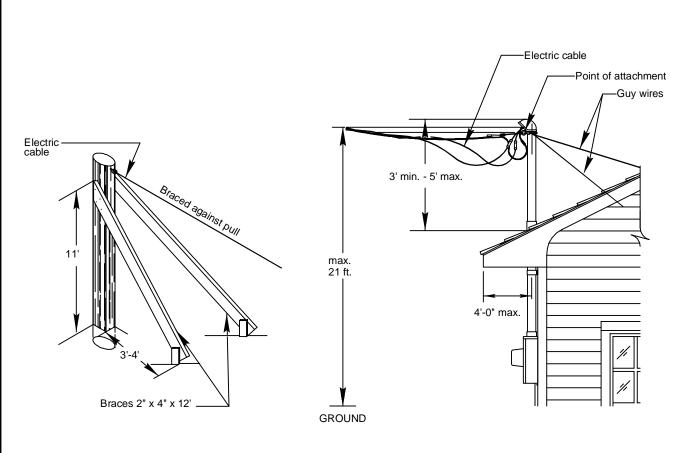

POLE

MAST ABOVE ROOF

NOTES:

1. Bracing is required if a pole or riser is unstable, bends, or moves when shaken or a ladder is put against it or bends when wires

CALL 811 TWO BUSINESS DAYS BEFORE YOU DIG

In locations with underground facilities, the Customer shall notify One Call and shall have One Call locate all underground facilities before digging. It shall be the responsibility of the Customer to stay clear of all underground facilities.

ENTERGY SERVICES, INC. 2. Consult the Company for specific requirements. **BRACING** 02/26/2013 APPROVED BY: DATE: JRH 4 CHECKED BY: SCALE: **JED** None 3 krich95 DRAWN BY: 2 D2-1 No. 1 02/13 THIS DRAWING ADDED-NEW JED Entergy PLOT 1=1 SH. 1 OF DATE: REVISION BY: APPR: